



EN

Converta Cot

IMPORTANT SAFETY INSTRUCTION

When using furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this cot.



To reduce the risk of injury to persons:


- Close supervision is necessary when this cot is used by, or near children, or disabled persons. Do not allow a child to assemble the cot.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- To avoid bodily injury, place the cot on an even surface, and extend the legs fully and adjust the back rest before placing any weight in the center of the cot.
- To avoid injury to hand or fingers, do not adjust the backrest while seated on the cot, or while someone is resting on the cot. Follow instructions below for adjusting the backrest.
- Do not stand on the cot, allow children to play or bounce on the cot. Do not use it as a step to reach a high place.
- Inspect the cot before each use. Do not use the cot if fabric is faded or ripped, metal bent, or other damage to the cot. Do not place the cot in the sun or weather for long periods of time, which may weaken the fabric.
- Keep the cot away from any fire / heat source.
- Only sit on the center of the cot. Sitting on either end may put strain on the legs which may cause the cot to collapse.
- Pinch points are indicated by the marking shown in the top left corner of this section. Use extreme caution when extending the legs or adjusting the head support.

Use Instructions:

1. Unfold the cot and extend the legs at both ends and place the cot securely on the ground. Only place weight in the center of the cot.
2. To elevate the head of the cot place one hand on the center side rail and lift up on the end of the cot until the desired elevation is reached (Fig. 1). Do not adjust with any weight on the headrest.
3. Push the U-shaped adjusting bar onto the cross piece at the desired level. Place your hand on the center of the adjusting bar and push down to secure the head of the cot in place (Fig. 2). Avoid placing your fingers between the slots on the adjusting bar and the cross piece.
4. To fold the cot, place the head rest in the level position and fold the legs toward the center and fold the cot in half. Secure the legs with the provided straps. The cross piece can be used as a carry handle.

Care Instructions:

1. To remove any smudge on the product, use a diluted mild detergent and wipe it off using a well-wrung cloth.
2. Do not use any organic solvent such as a paint thinner and benzene which could lead to discoloration, color alteration, removal of printed items or resin finish. Do not wash product as it could cause damage.
3. Do not use a washing machine, dryer, or hot air dryer to clean or dry the cot as this may cause damage to the fabric.
4. Product color could be faded by friction, moisture or sweat.
5. Seat and backrest fabric may stretch during use or if the material gets wet.
6. When transporting the product using a car or other type of vehicle, the metal frame may scratch the floor of the trunk or cargo bed, so please load carefully.
7. Using the product indoors could cause scratches on the floor, etc. so please be careful especially when using it on a delicate surface such as wooden flooring.
8. Do not put sharp objects inside when storing the cot. It could damage or tear the product.

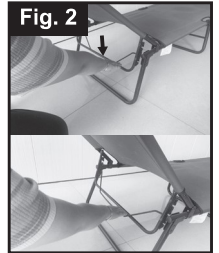

Manufactured for The Coleman Company, Inc.

For products purchased in USA :
3600 North Hydraulic,
Wichita, KS 67219 U.S.A.
1-800-835-3278 US
TDD: 1-316-832-8707
www.coleman.com

For products purchased in Canada :
20B Hereford Street
Brampton, ON L6Y 0M1
1-800-835-3278 US

Newell Australia Pty Ltd
Caribbean Park
Level 3, 35 Dalmore Drive
Scoresby, VIC 3179
Australia

Email: customerservice@colemanaustralia.com.au
www.colemanaustralia.com.au

© 2022 The Coleman Company, Inc.
All rights reserved.

4010069405 (ECN0065027-B)



JP

コンバータコット(ベージュ)

安全に関する重要事項

このコットをご使用になる前に説明書をよく読み、基本的な注意事項を必ず守ってください。



怪我のリスクを低減するために:

- お子様によるご使用、お子様の近くでのご使用、または身体障害者の方によるコットのご使用には特に注意が必要です。お子様にコットの組み立てをさせないでください。
- このコットは、説明書に記載されている目的にのみお使いください。製造元が推奨していない付属品は使わないでください。


- 身体への怪我を防ぐため、コットは平らな場所に設置し、コットの脚を完全に伸ばし、コットの中央部に体重をかける前に背もたれ部分を完全に調整してください。
- 手指への怪我を防ぐため、コットに座っていると、またはコットに誰かが寝ているときには背もたれ部分を調整しないでください。
- 背もたれの調整は、以下の説明に従ってください。*コットの上面に立たないでください。また、お子様にコットの上で遊んだり飛び跳ねたりさせないでください。また、コットは踏み台として使わないでください。
- 毎回、ご使用前にコットを点検してください。コットの布地が老朽化して薄くなっていたり裂けていたりする場合、金属部品が曲がっている場合、また、コットにその他の損傷がある場合は使わないでください。
- コットは、火気/熱源に近づけないでください。
- コットは、中央部のみ腰かけてください。末端部(どちらの側でも)に腰かけるとコットの脚に負担をかけるため、コットが崩れることがあります。
- ピンチポイントは、このセクションの左上隅に示されています。コットの脚を伸ばすときや頭もたれを調整するときは、特に慎重に行ってください。

使用方法:

1. 折り畳まれているコットを広げ、両側の脚を伸ばして床または地面にしっかりと設置します。コットの中央部にのみ体重をかけるようにしてください。
2. コットの頭の部分を高くするには、片手を中央のサイドレールに置き、求める高さで得られるまでコットの端を持ち上げます(図1)。体重をかけて頭もたれを調整することはお避けください。
3. U字型の調節棒の中央に手をあてて横材に押し付けた状態で所望の位置に調節してください。(図2)。調節棒と横材の間の隙間に指を入れないように気をつけてください。
4. *コットを折り畳むには、頭もたれの部分を水平にし、脚を中央部に向けて折り、コットを半分折り畳みます。付属品のストラップで脚を固定します。横材は、持ち運び用の取手として使うことができます。

取扱い上の注意:

1. 本製品の汚れを取り除くには、水で薄めた中性洗剤を含ませてよく絞った布で拭き取ります。
2. シンナーやベンジンなどの有機溶剤は、変色を引き起こしたり、印刷された文字などを消したり、樹脂加工を剥離させたりする可能性がありますので使わないでください。損傷の可能性があるため、本製品は洗わないでください。
3. 布地を損傷する可能性があるため、洗濯機、乾燥機、熱風のドライヤーなどを使ってコットを洗ったり乾かしたりしないでください。
4. コットは、摩擦、湿気、汗などによって変色することがあります。
5. シート部分と背もたれ部分の布地は、使用中、または素材が濡れた場合に伸びて張りが緩むことがあります。
6. 乗用車やその他の車両で本製品を運搬するとき、トランクや荷台の床にこすれると傷がつくことがあります。充分注意して積載してください。
7. 屋内で本製品を使う場合、床などに傷をつける可能性があります。フローリングなど、傷につきやすい表面に設置して使うときは、特にご注意ください。
8. 鋭利な物の中に入れてコットを収納しないでください。製品に傷がついたり、布地が裂けたりすることがあります。

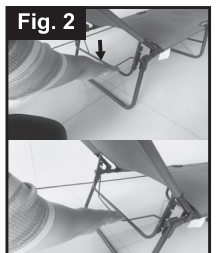

Newell Brands Japan G.K.

ニューエルブランドズ・ジャパン合同会社
〒108-0023 東京都港区芝浦4-9-25 芝浦スクエアビル
お問い合わせ先: 0120-111-957
www.coleman.co.jp

© 2022 The Coleman Company, Inc.
無断複製禁止